

Head Lock Remote Glow Plug Connector

INSTRUCTIONS

Mount Jack (dummy glow plug) Bracket in a convenient location. Slip Head Lock wire through slot in bracket. Attach ground wire lug and jack to bracket with brass panel nut. Attach other end of ground wire to any engine screw, and connect the Head Lock to the glow plug with a clockwise twist-lock action.

OPERATION

Attach a Head Lite to the jack to light glow plug; remove once engine has started.

